

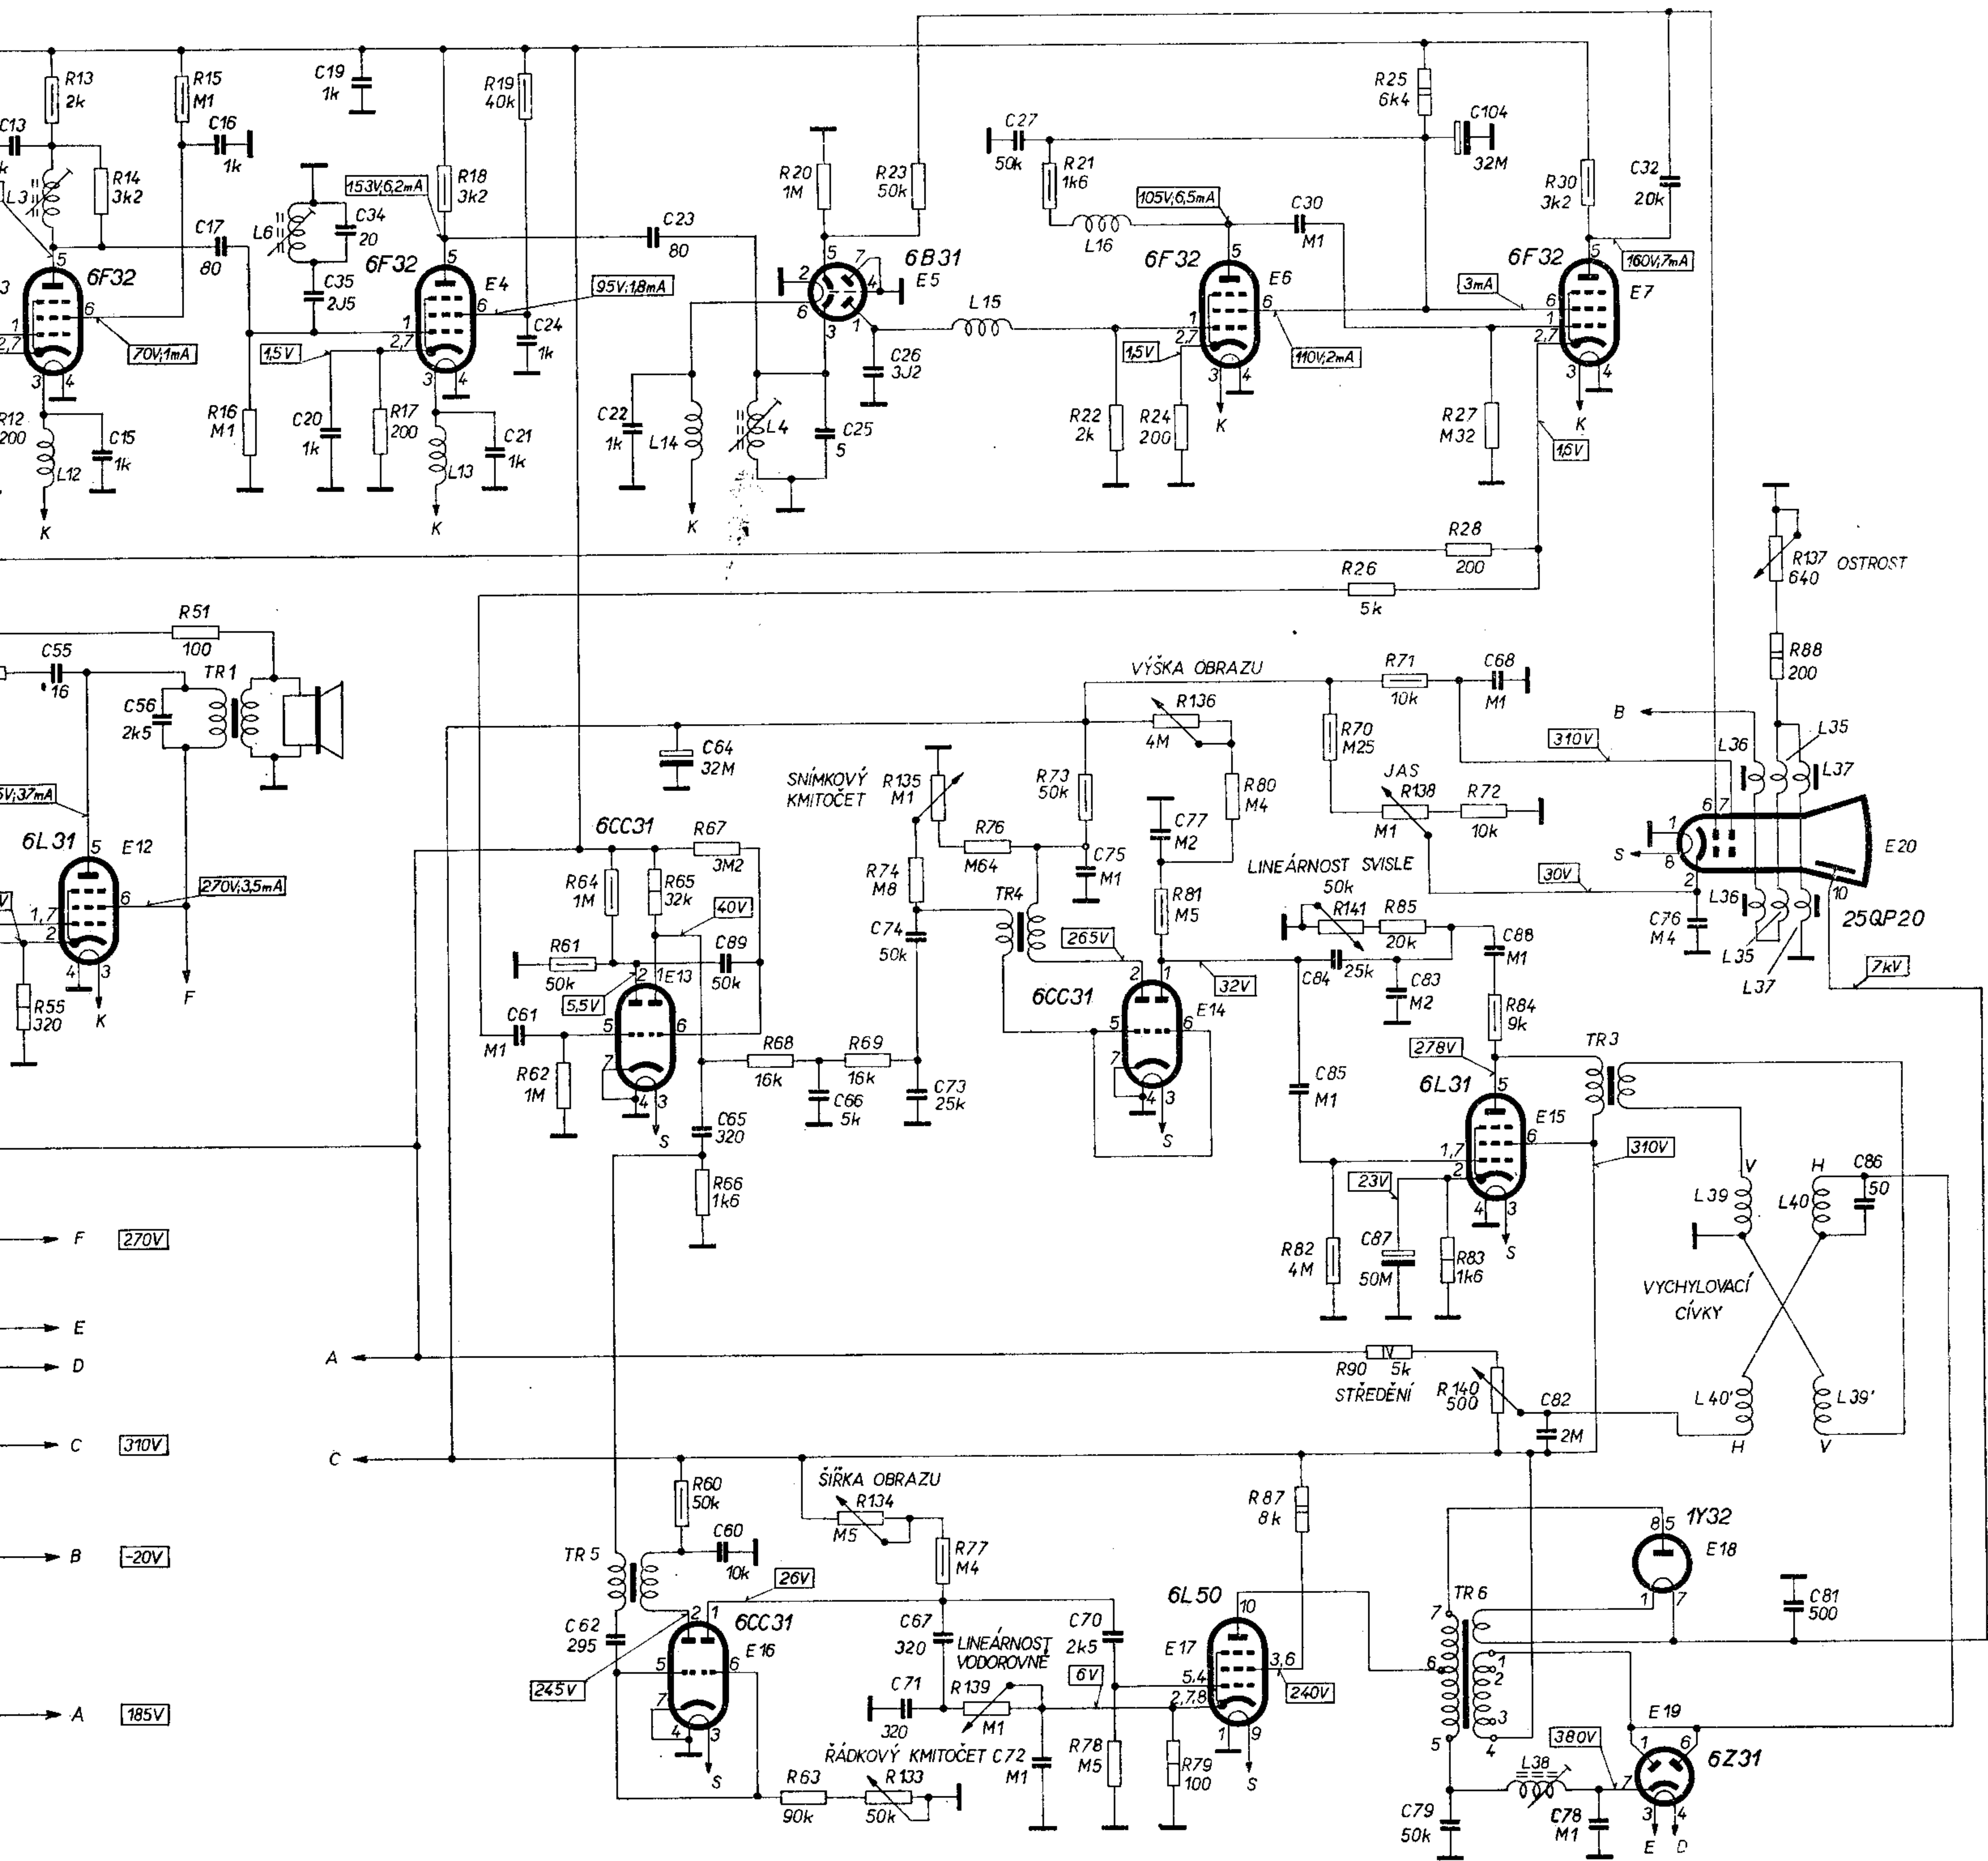


| | | | | | | | | | | | | | | | |
|---------|----------|------------|-----|----------|--------|---|------------|---------------------|----------------------------|--------------------------|------|-------------------|--------------|--------|-----|
| 13, | 15, 51, | 17, | 18, | 19, | 64,65, | 63,20,69,134,133,23,135,139, 21,73, 22, | 24, 136, | 82, | 70,71,26, 25, 27, 28, 138, | 30, | 137, | | | | |
| 55, 14, | 16, | | | | 61,62, | 66,60,67,68, | 74, 76,77, | 78, | 81,79, 80,87, | 141,90,85, 83,72,84,140, | 88, | | | | |
| 55,15, | 16,17, | 34, 35,19, | | 21, 61, | 22, | 62,64,89,60, | 25,26,74, | 27, | 75, | 70, | 30, | 84,83,87, | 79,88,68, | 32,76, | 86, |
| | 56, | 20, | | 24, | | 23, | 65, | 66, 71, 67, 73, 72, | | 77, | 85, | | 104,82, | 78, | 81, |
| L3,L12, | TR1, L6, | L13, | | L14,TR5, | L4, | L15, | TR4, | L16, | | TR6,L38, | TR3, | L39,L40,L39',L40, | L36,L35,L37, | | |

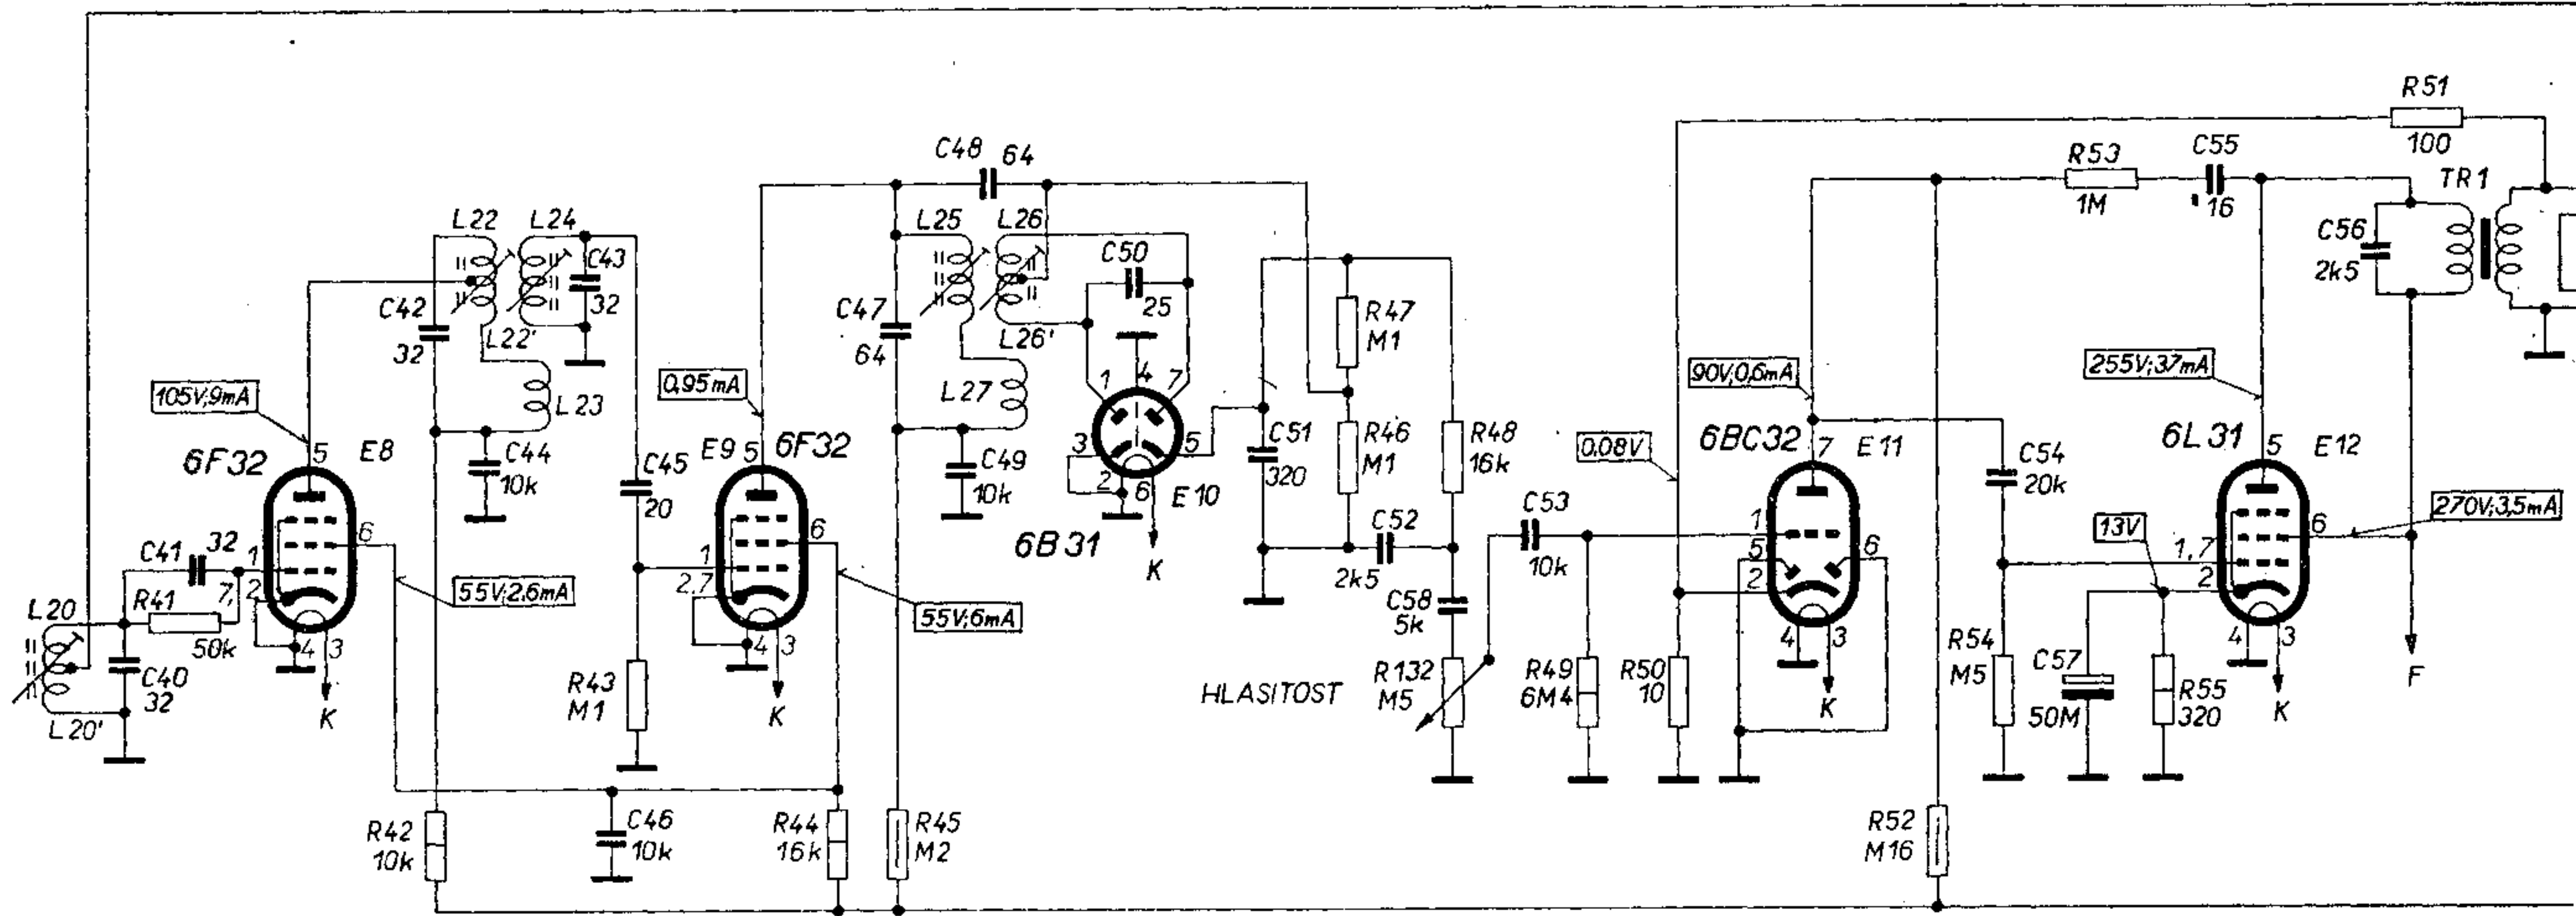

Zapojení televizního přijímače 4001A
PŘÍLOHA XX.

| | | | | | | | | | | | | | | |
|---|------------|------|----------------------|---------|---------|--------|------------------------------------|------------|--------------------|----------|-------------|-----|----------|----------|
| | 1, | 131, | 2, | 4, | 5, | 47 | 48, 132, | 7, 8, | 31, | 10, | 52, 53, 12, | 13, | 15, 51, | |
| R | 41, | 42, | 3, 43, | 44, 45, | | | 46, 6, | 7, | 49, 50, 89, | 101, | 11, | 54, | 55, 14, | 16, |
| C | 40, 41, | | 44, 43, 45, 46, | 3, 47, | 48, 49, | 4, 50, | 7, | 9, 52, 58, | 100, 53, 63, | 101, 12, | 105, 14, | 57, | 56, | 34, |
| L | L20, L20', | | L22, L22', L23, L24, | | | | TR7, L1, L10, L25, L27, L26, L26', | | L2, L11, TL1, TL2, | | L7, | | L3, L12, | TR1, L6, |

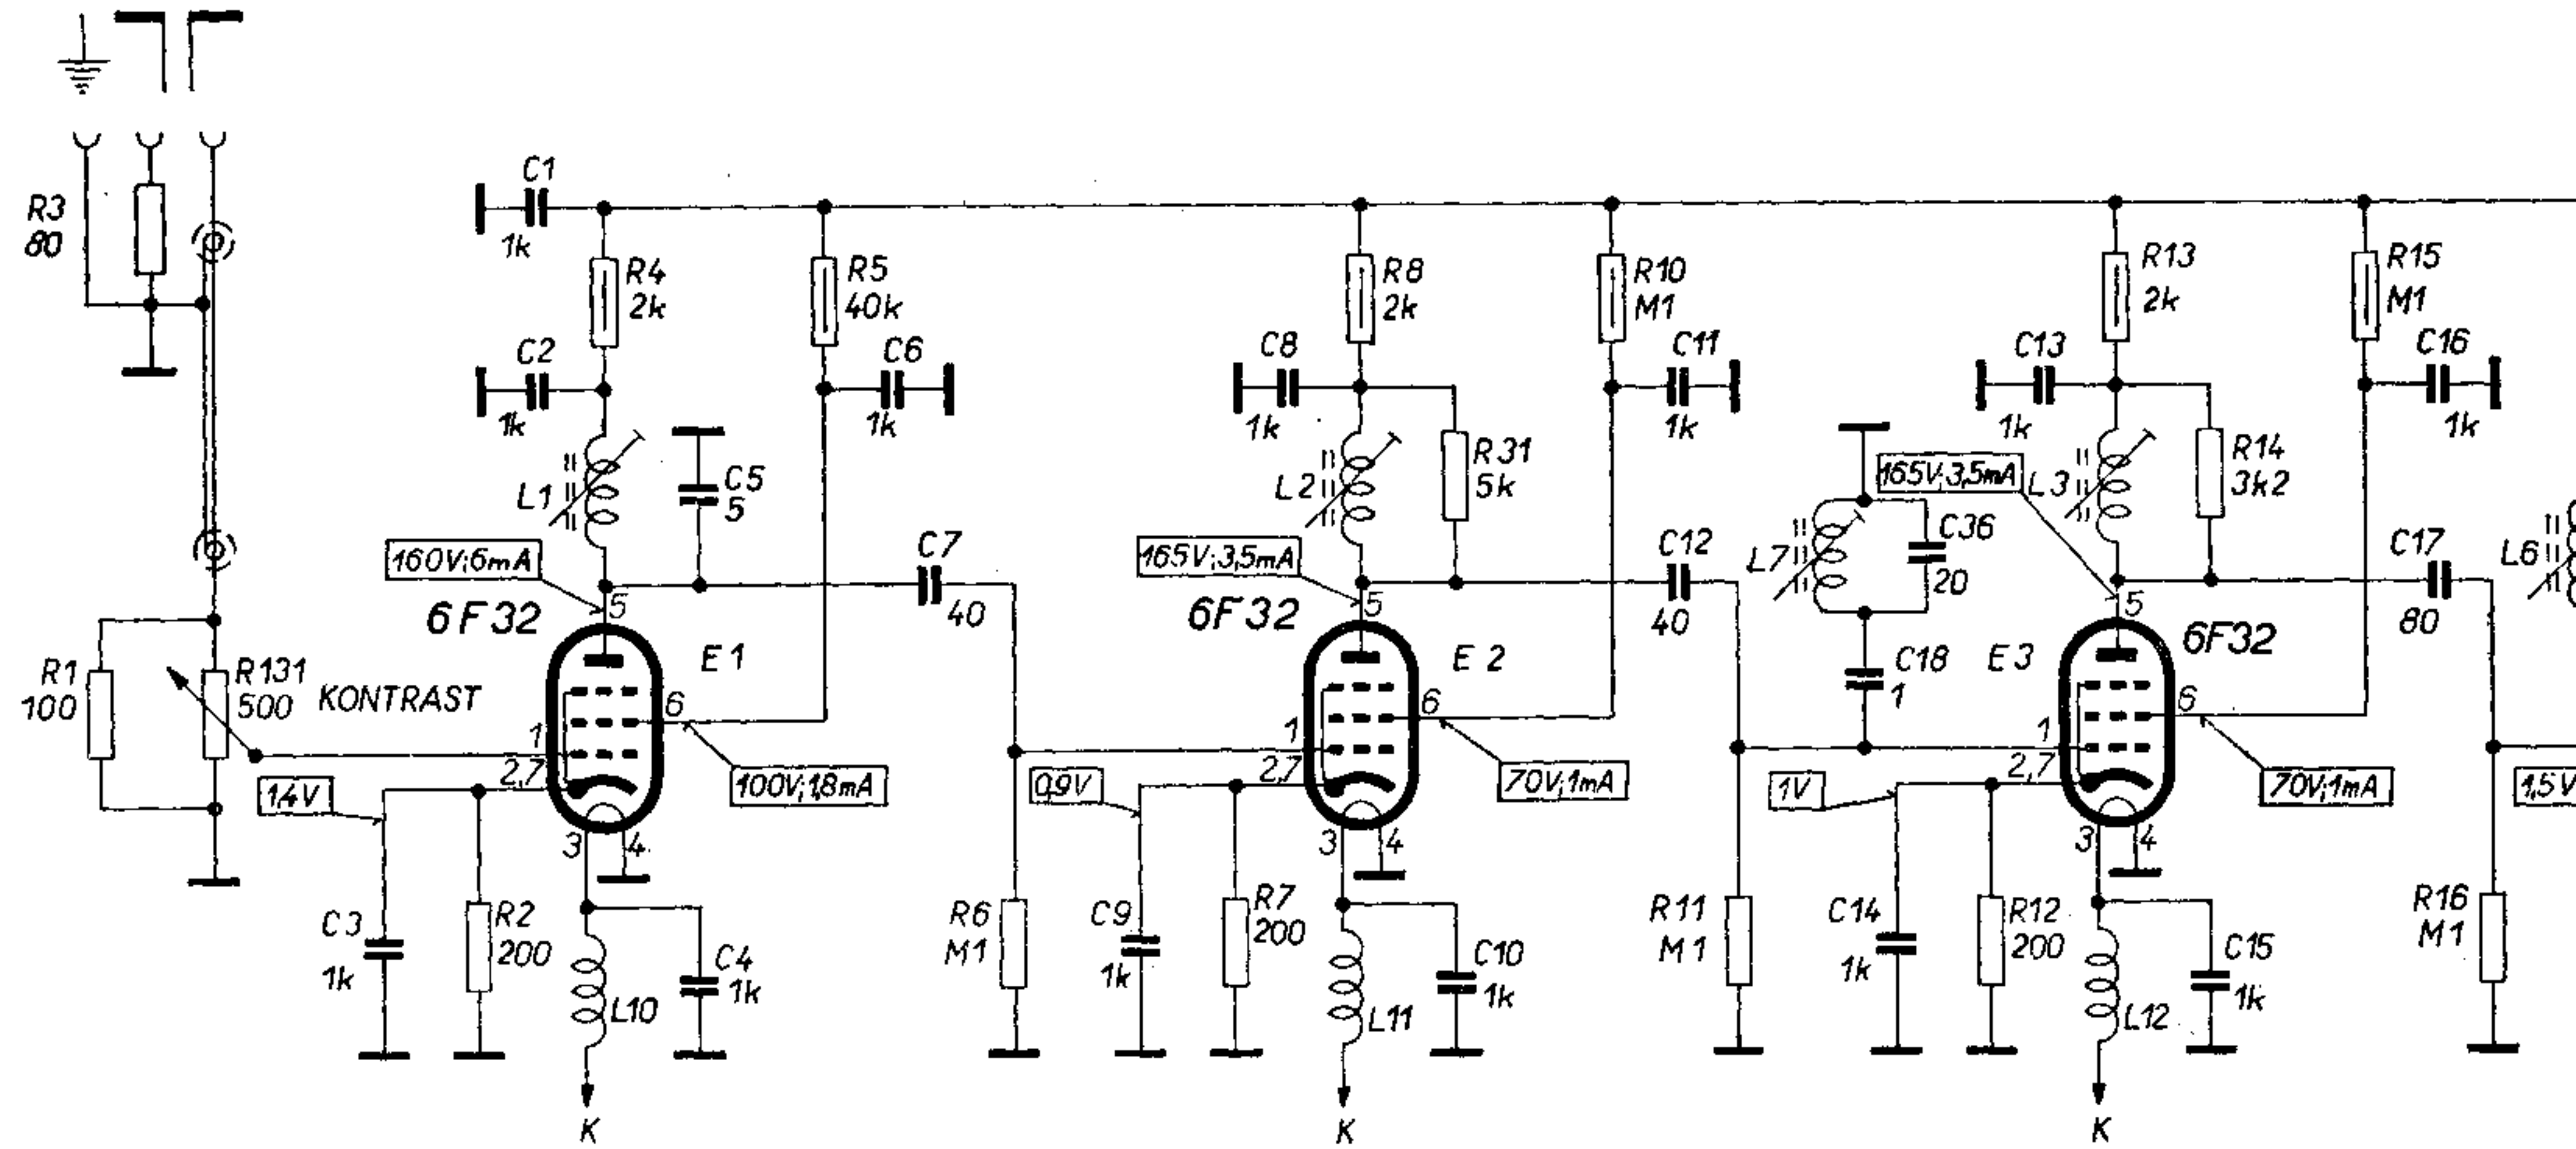

PATICE ELEKTRONEK

