


PATICE ELEKTRONEK


TAKTO:
POJÍ SE
- 2,
- 2,
- 2,

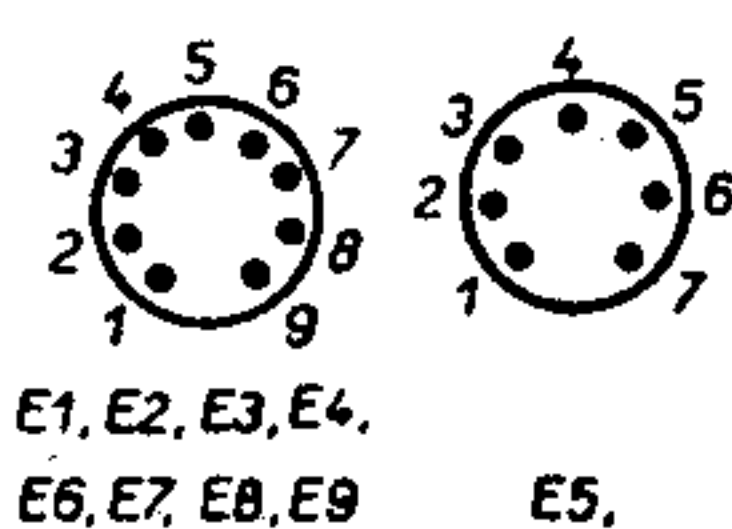

Zapojení rozhlasového přijímače 627A „VARIACE“

PŘÍLOHA III.

R	221, 2, 3, 228, 223, 222,	1, 224, 225,	6, 5, 226, 227,	11, 9,	4, 10, 8,	28, 13, 15,	12, 29, 17,	2
C	26, 27, 31	32, 87, 23, 24, 234, 221, 222, 223,	13, 14, 15, 16, 7, 225, 3, 4, 5, 6, 226, 227, 233, 231, 232, 1, 37, 230, 229, 40, 105, 214, 43,	38, 2, 28, 29, 30, 8, 9, 10, 11, 12, 17, 19, 19, 20, 21, 35, 36, 39, 46, 48, 45, 42, 47, 49, 50, 54,	53,	51, 57, 59, 55,		
	27, 26, 31, 30, 211, 212, 212', 8, 10, 32, 203,	2, 4, 208, 3, 5, 7, 6, 9, 11, 209, 205, 205',	206, 207		13, 15, 17, 19, 21, 12, 14, 16, 18, 20,	33, 34, 22, 35, 23,		36,

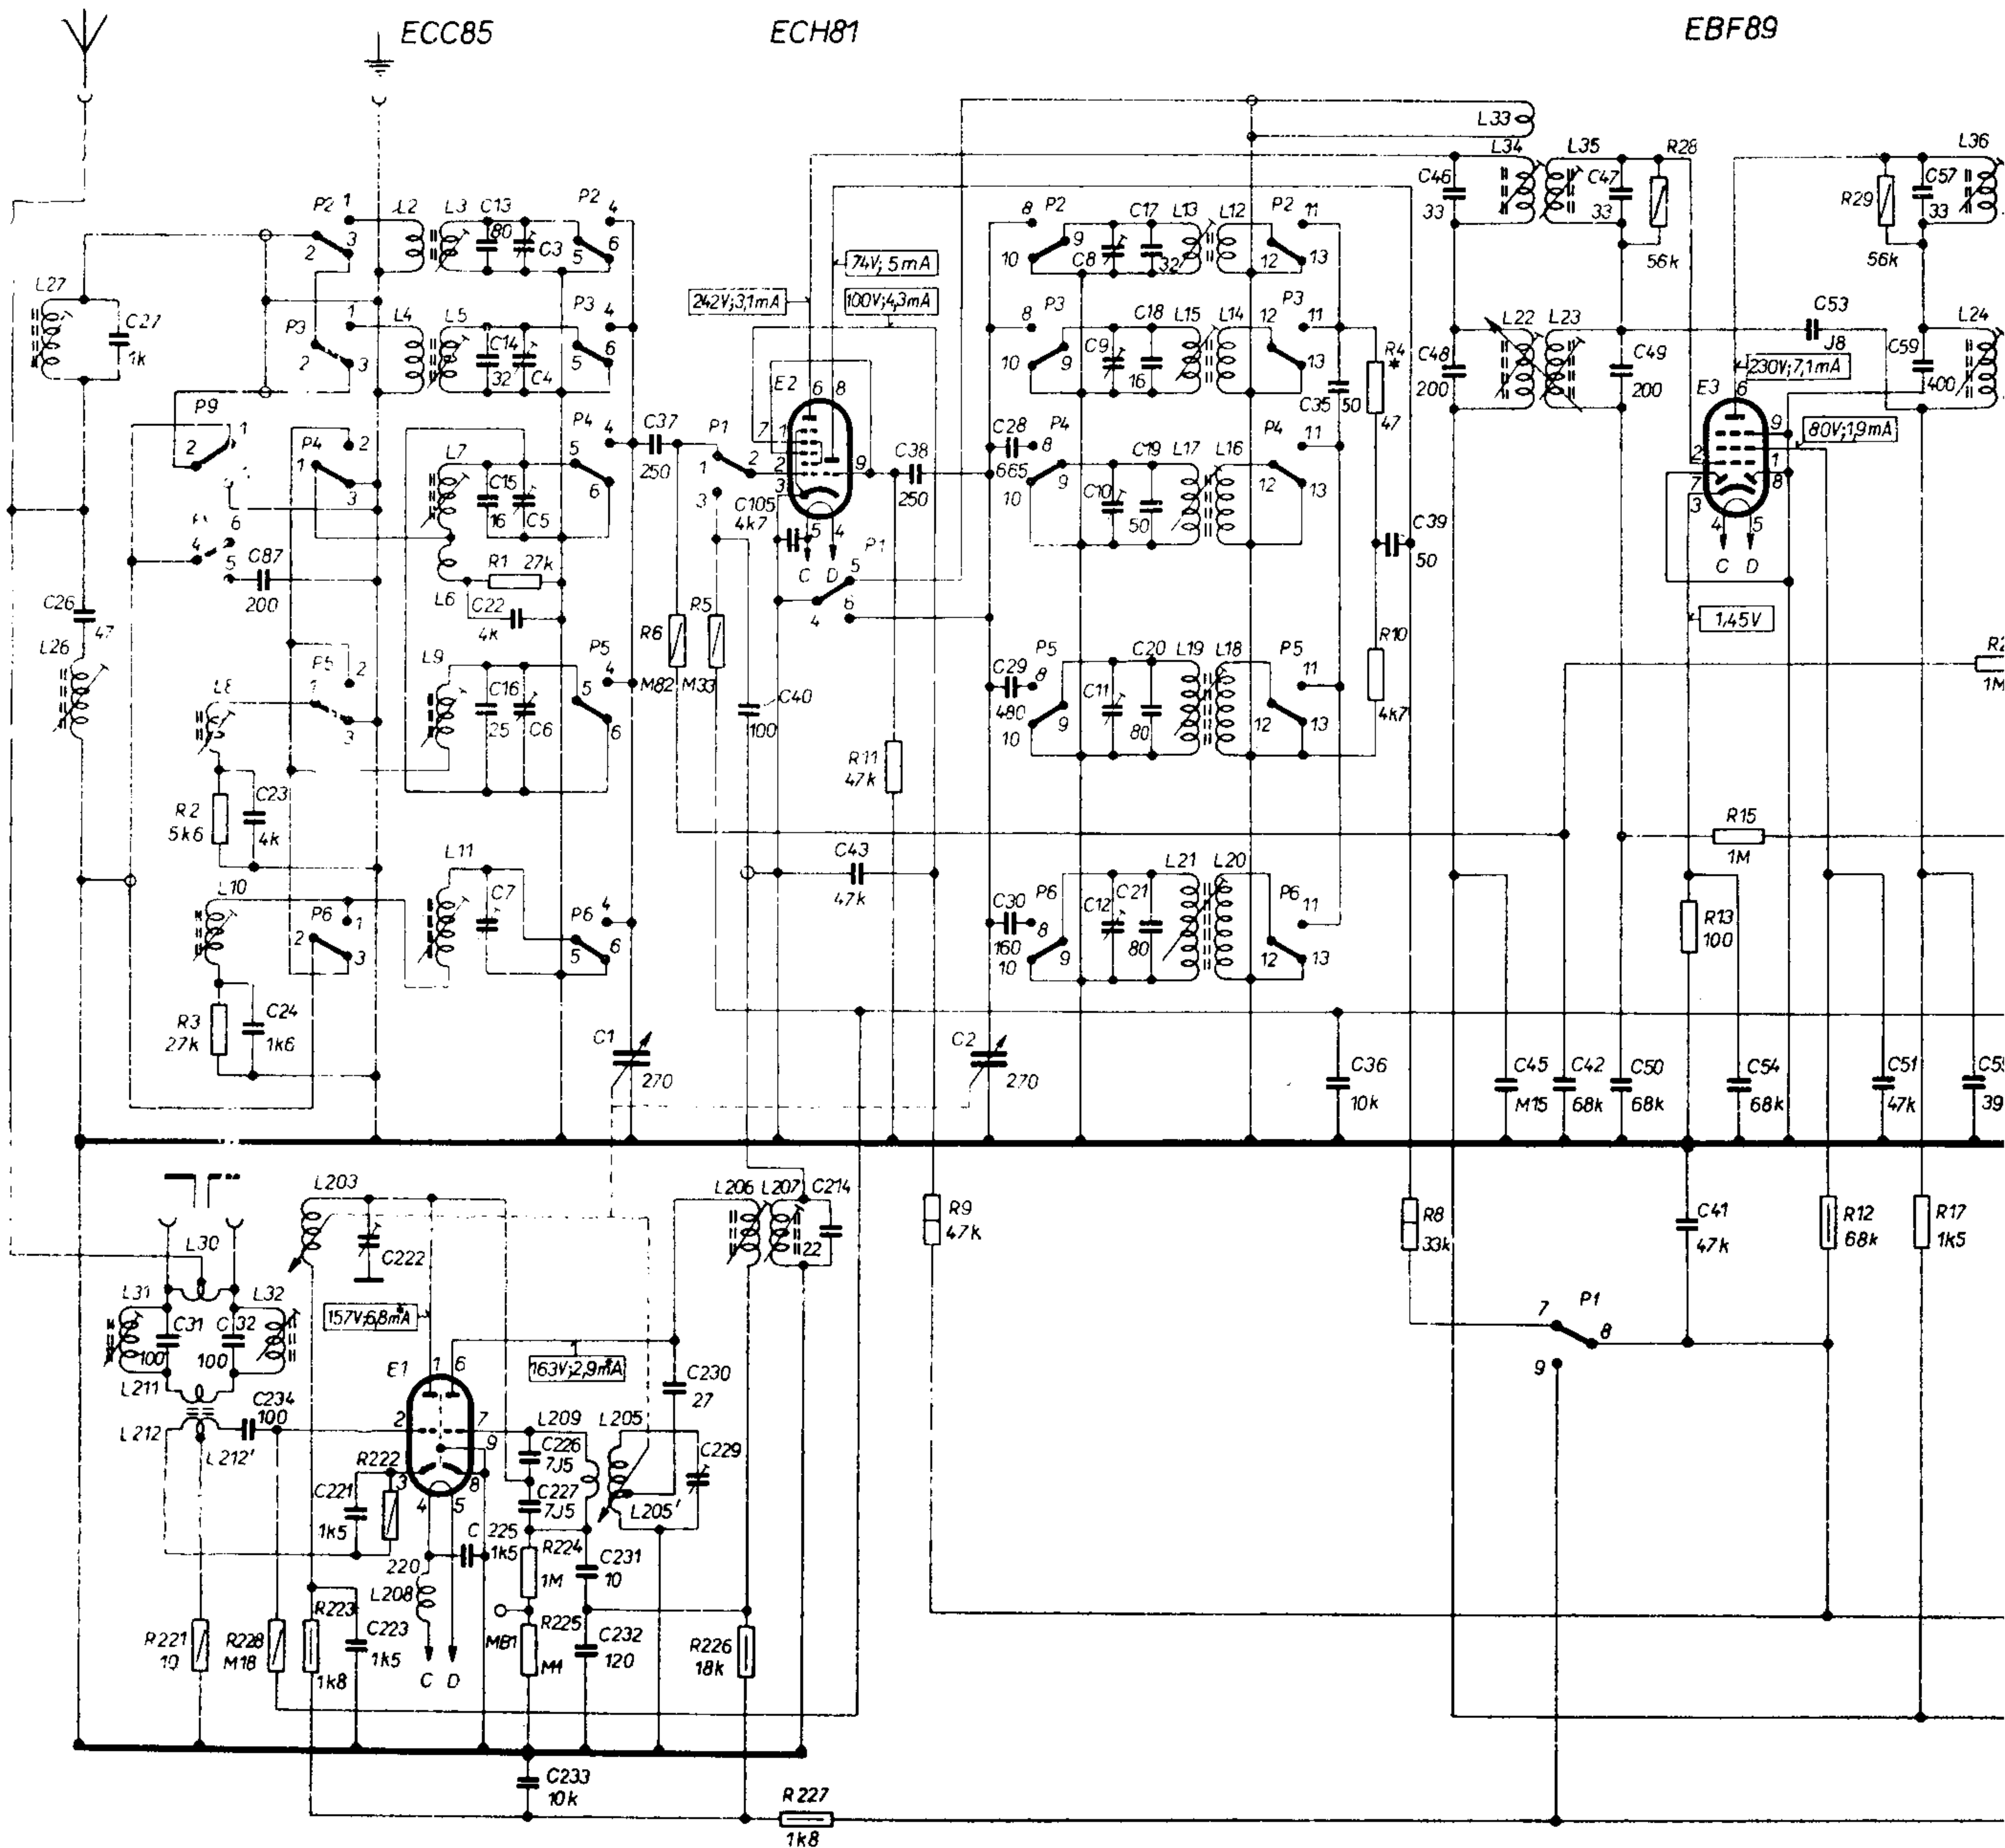

\* PŘÍJÍMAČ PŘEPNUT NA VKV

TLAČÍTKOVÝ PŘEPÍNAČ P1-P8

TLAČÍTKO OZNACENÉ	STISKNUTÍM TLAČÍTKA MĚNÍ SE SPOJENÍ TAKTO:	
	SPOJÍ SE	ROZPOJÍ SE
0 P8		1-2, 3-4,
⊙ P7	2-3, 5-6,	1-2, 4-6, 7-8,
DV P6	1-2, 4-5, 8-9, 11-12,	1-3, 5-6, 9-10, 12-13,
SV2 P5	1-2, 4-5, 8-9, 11-12,	1-3, 5-6, 9-10, 12-13,
SV1 P4	1-2, 4-5, 8-9, 11-12,	1-3, 5-6, 9-10, 12-13,
KV2 P3	1-2, 4-5, 8-9, 11-12,	2-3, 5-6, 9-10, 12-13,
KV1 P2	1-2, 4-5, 8-9, 11-12,	2-3, 5-6, 9-10, 12-13,
VKV P1	2-3, 4-6, 8-9, 10-11,	1-2, 4-5, 7-8, 11-12,

TLAČÍTKOVÝ PŘEPÍNAČ P9-P12

TLAČÍTKO OZNACENÉ	STISKNUTÍM TLAČÍTKA MĚNÍ SE SPOJENÍ TAKTO:	
	SPOJÍ SE	ROZPOJÍ SE
ŘEČ P12		1-2,
SOLO P11		1-2,
ORCH. P10		
FERRIT P9	2-3, 4-5, 7-8,	1-2,